




Part number: FT1000531 - Model: FT18SM-CR 90




| TECHNICAL CHARACTERISTICS | |
|-----------------------------------|------------------------------|
| Power supply: | Direct current |
| Working voltage: | 10 ÷ 30 Vdc |
| Switching distance (cm): | 0 ÷ 500 (adjustable) |
| Output type: | DC PNP/NPN |
| Function: | NO+NC |
| Actuation type: | Instantaneous |
| Light source: | Infrared |
| Power on delay: | < = 100 mSec |
| Max switching frequency: | 400 Hz |
| Max output current: | 200 mA |
| Absorption: | < = 20 mA @ 24 Vdc |
| Voltage drop: | < = 1.8V |
| Short circuit protection: | Present |
| Interference from external light: | > 10000 Lux |
| Led indicator: | Yellow = operation indicator |
| Temperature limits: | -20 ÷ +50 °C |
| IP rating: | IP 67 |
| Housing material: | Nickelled brass |
| Mechanical characteristics: | M18x1 |
| Connection type: | Cable 2 m |
| Cable type: | 4x0.25 PVC |
| Weight: | 130 g |

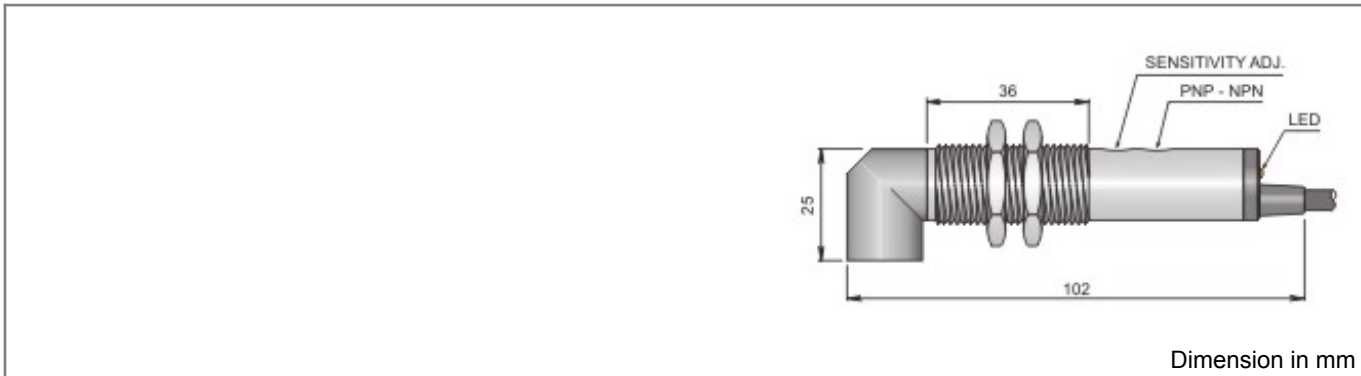

Part number: FT1000531 - Model: FT18SM-CR 90

WIRING DIAGRAM


4 WIRES CABLE - LOGIC NPN+PNP / NO+NC

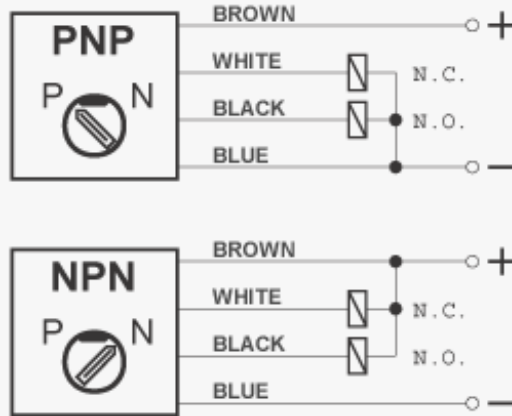

INSTRUCTIONS FOR CORRECT INSTALLATION



INSTRUCTIONS FOR THE PROGRAMMING AND ADJUSTMENT

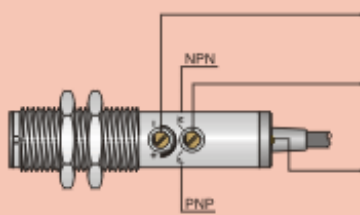

TRIMMER FOR THE SENSING RANGE ADJUSTMENT : The photocell is supplied with max. sensing range with the trimmer totally rotated in the clockwise direction. The sensitivity reduces by rotating the trimmer in the anti-clockwise direction.

SWITCH NPN / PNP : The photocell is supplied with the switch in P (PNP output). To change to NPN turn the switch to N in the anti-clockwise direction.
WARNING ! For a correct working of the unit, do not carry out the switching when the photocell is powered.

YELLOW LED - OPERATION INDICATOR : This led is ON when the object to be detected enters the sensing range of the photocell giving output signals.

NOTE ! Before giving a power supply to the photocell it is recommended that the same unit be programmed by using the switch in the required function NPN or PNP.

NOTE ! It is recommended that the trimmer and the switch would be rotated very carefully by using a proper tool otherwise these can be seriously damaged.

